


2.C

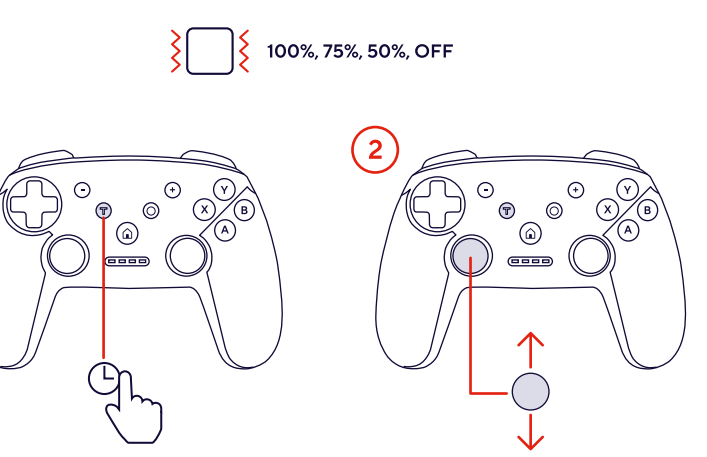

3.



4.



5.

Controller key	Switch	PC Input
X	Y	X
A	B	A
B	A	B
Y	X	Y
+	+	Start
-	-	Back
L-Stick	L-Stick	L-Stick
R-Stick	R-Stick	R-Stick
L	L	LB
R	R	RB
LZ	LZ	LT

Controller key	Switch	PC Input
RZ	RZ	RT
L3	L3	L3
R3	R3	R3
T	Turbo	Turbo
○	Screenshot	N/A
Up	Up	Up
Down	Down	Down
Left	Left	Left
Right	Right	Right
Home	Home	Guide

6.

• CLEVER GAMING

GAMINGXTrust.

MUTA

USER GUIDE

WIRELESS CONTROLLER

FAQ


WWW.TRUST.COM/24790/FAQ

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, The Netherlands



©2023 Trust All rights reserved.

Bedienungsanleitung | Mode d'emploi | Gebruikershandleiding | Manuale utente | Manual del usuario | Guia do utilizador | Brukerveiledning | Bruksanvisning | Käyttöopas | Brugsvejledning | Instrukcja obsługi | Návod k použití | Návod na používanie | Használati útmutató | Manual de utilizare | Ръководство за потребителя | Εγχειρίδιο χρήσης | Kullanıcı kılavuzu | Руководство пользователя | Uporabniški priročnik | Korisnički priručnik | Guia do usuário | Посібник користувача | مودسترسیملا لید



1.

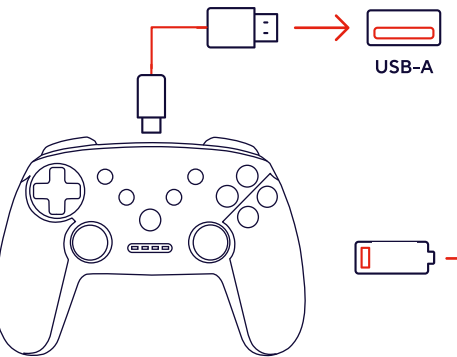


2.A

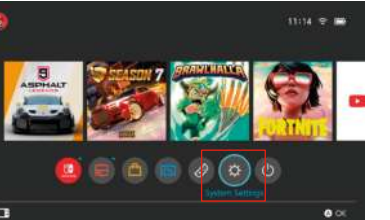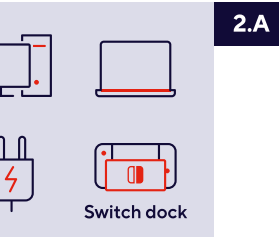



3.A

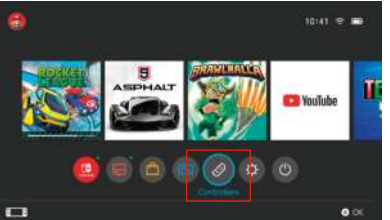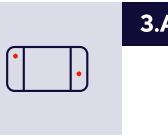




4.A

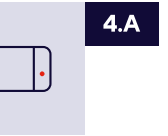

2.B

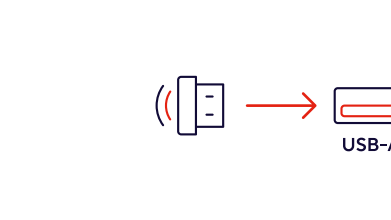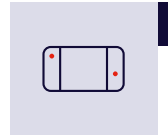

3.B

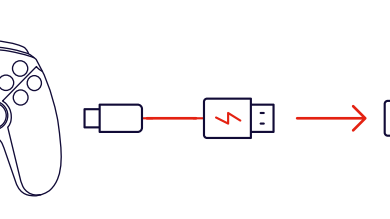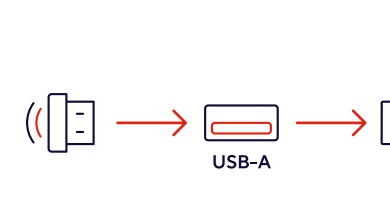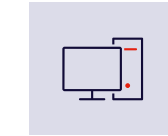

3.B

