

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

### 1 Turn on the appliance

- Open the dishwasher door, press the on/off button. Power indicator will be on

### 2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

### 3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

### 4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

### 5 Select the wash programme

- Open the door, press the Power button. Choose a program, the response light will turn on.
- Then close the door, the dishwasher will start its cycle.

### 6 Start your dishwasher

- Open the dishwasher door.
- The dishwasher will start a wash programme.

### 7 Turn off the appliance

 
 
- Turn the appliance off using the On/Off button.

### 8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

### 9 Features and components


- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

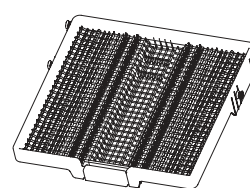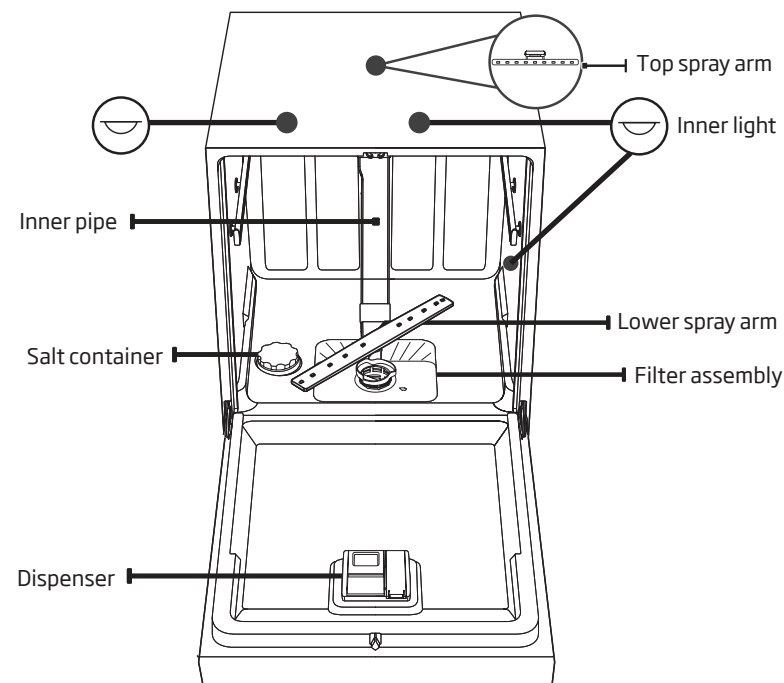

Cutlery basket



 Upper spray arm  
Cup rack  
Upper basket

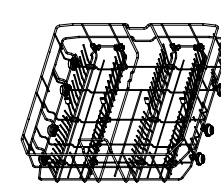






Lower basket



**NOTE:** Figures are for illustrative purposes only Individual models may vary.

 TABLE OF WASH PROGRAMMES: EGSPV 594 300

ITEM	Programme name	The default temperature [°C]	Type of soil	Amount of detergent	Type of cycle						Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Hygiene 	72°	With the Sanitize option selected, the water temperature is increased to 72° C for high temperature sanitization.	5g/17g (1 or 2 tabs)	Pre-wash 45°C	Wash 72°C	Rinse	Rinse 50°C	Rinse 60-65°C	Dry	165	1.650-1.720	16.0
2	1 hour 	50°	For normally soiled loads that need quick wash.	5g/17g (1 tab)	Wash 50°C	Rinse	Rinse 55°C	Dry			58	0.795	11.5
3	**ECO 	45°	Lightly soiled glass-ware and porcelain.	22g (1 or 2 tabs)	Wash 45°C	Rinse	Rinse 43°C	Dry			280	0.543	9.0
4	Self-Cleaning 	70°	This program provides an effective cleaning of the dishwasher itself.	20g (1 or 2 tabs)	Wash 70°C	Rinse	Rinse 65-72°C	Dry			130	1.245-1.320	12.0
5	Auto 	55-65°	A shorter wash for lightly soiled loads that do not need drying.	5g/17g (1 or 2 tabs)	Pre-wash 45°C	Wash 55-65°C	Rinse	Rinse	Rinse 50-65°C	Dry	179	0.930-1.470	10.3-17.0

\*\* Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

\* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.