



Works with Apple Find My

The Apple Find My network provides an easy, secure way to locate compatible devices. When using the Find My app on your iPhone, iPad, Mac, or the Find My app on Apple Watch.

Apple Find My

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find My app on Apple Watch requires the latest version of watchOS.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified to meet Apple's requirements. Apple is not responsible for the operation of this device or its accessories or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS are trademarks of Apple Inc., registered in the U.S. and other countries and used under license.

8. Press "End" you can now link TRACY TAG to the object you want to track and you can display the information on the Find My app.

9. Open the "Find My" app and press the object icon. Then press "Follow" below "Location" to activate the tracking function.

10. Press "Continue" and add your telephone number or e-mail address so you can be contacted if necessary, or choose "Do not add" to skip this step.

11. Confirm the information, customize the lost message and press "ON" to finish setting up the object.

REMOVING TRACY TAG

1. Open the "Find My" app and press the object icon.

2. Press "Remove" to remove the object from the Find My app.

Note: after you have removed TRACY TAG from the app, the device will remain on stand-by for 60 seconds before it automatically powers off.

FINDING REMOVED OBJECTS

1. Open the Find My app, then press the Objects panel.

2. Select the object you want to track and tap on it to hear a sound.

3. Press "Ring" if TRACY TAG is in Bluetooth® range, it will make a sound.

4. If the object is not in range, it will vibrate automatically, press "Stop".

FINDING AIRMAY OBJECTS

1. Press "Find My" to activate the Find My app.

2. Press "Find My" to activate the Find My app.

3. To receive a notification when TRACY TAG is in range of the device or is found by the Find My network, turn on "Notify me when tracking" in the Notifications section.

If a device stays within the range of operation of TRACY TAG's Bluetooth® for a prolonged period, the Find My app will send you a notification.

If TRACY TAG stays still for a long time, it will enter the movement detection mode. Once this function is activated, a beep notification will be activated.

TECHNICAL SPECIFICATIONS

Dimensions: 37 mm x 37 mm x 9 mm

Materials: Polycarbonate

Battery: CR2032 non-rechargeable

Operating temperature: -20°C to 60°C

Bluetooth®: Low energy Bluetooth®

Bluetooth®: 4.2 (Bluetooth 4.0 in brackets)

Operating temperature: -20°C to 60°C

Frequency Band: 2400 MHz to 2483.5 MHz

Power consumption: 2400 MHz to 2483.5 MHz

POTENTIAL PROBLEMS

1. Check the battery and make sure it is inserted correctly.

2. Reset the device.

3. Remove the battery and put it back inside its compartment.

BATTERY (20)

1. The battery is a button battery. You might need to replace the battery during the product's life cycle. Only replace it with the same type of battery (CR2032) and in the same direction as the original.

You can monitor the battery level on the Find My app. When the battery is running low, you will receive a notification.

Replacing the battery:

- Open the battery compartment by turning the back cover as the arrows on the back cover indicate.
- Remove the battery.
- Insert the new battery into the device with the positive side (+) facing upwards.
- Connect the top and bottom covers by turning and pressing firmly.

TRACY TAG is designed to avoid any unwanted tracking.

When you have finished using the device for an extended period of time, you will receive a notification in one of the two following ways:

- If you have an iPhone, iPad or iPod touch, the Find My app will send a notification to your Apple device. This function is available on iOS/iPadOS 14.5 or later.
- If you do not have an iOS device, TRACY TAG will make a repeated sound over time. These functions have been specifically created to deter people from trying to track you without your permission.

IT-REQUISITI PRINCIPALI

Prima di configurare TRACY TAG verificare di essere in possesso dei seguenti requisiti:

- Dispositivo Apple (iPhone® 6S in su, iPad®, iPod touch®) con iOS/iPadOS 14.5 o versioni successive.
- Funzione DoV attivata.
- Connessione a Internet.
- Buona connessione cellulare o Wi-Fi.
- Funzione localizzazione attivata.
- Attivare la localizzazione per l'app DoV. Per farlo è necessario andare su Impostazioni > Sicurezza e privacy > "Rubriche" > "Localizzazione" > "DoV".

SELEZIONARE "MENTRE USI L'APP", "DOPODICHE, ATTIVARE" "POSIZIONE ESATTA"

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

ATTIVAZIONE E SPOSTAMENTO

1. Premere il bottone laterale di TRACY TAG fino a che non si sente un lungo beep.

2. Premere il bottone laterale di TRACY TAG per 5 secondi fino a che non si sentono 3 beep consecutivi.

RESETTING

1. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

2. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

ACCENDERE IL DEVICE

1. Accendere il device.

2. Appre "Fav" "DoV" e toccare l'icona dell'oggetto.

3. Premere il bottone laterale di TRACY TAG una volta (lungo beep).

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

Batteria: CR2032 non ricaricabile

Acceleratore: Tronico SC7A20

Alimentazione: Low energy 5.0

Distanza di trasmissione: 40/50m (no ostacoli)

Funzionamento: 200 MHz a 2483.5 MHz

Antenna Type: PCB Antenna

Alimentazione: 2400MHz - 2483.5 MHz

Alimentazione: 2400 MHz to 2483.5 MHz

Alimentazione: 2400 MHz to 2483.5 MHz

REMOVING TRACY TAG

1. Open the "Find My" app and press the object icon.

2. Press "Remove" to remove the object from the Find My app.

Note: after you have removed TRACY TAG from the app, the device will remain on stand-by for 60 seconds before it automatically powers off.

FINDING REMOVED OBJECTS

1. Open the Find My app, then press the Objects panel.

2. Select the object you want to track and tap on it to hear a sound.

3. Press "Ring" if TRACY TAG is in Bluetooth® range, it will make a sound.

4. If the object is not in range, it will vibrate automatically, press "Stop".

FINDING AIRMAY OBJECTS

1. Press "Find My" to activate the Find My app.

2. Press "Find My" to activate the Find My app.

3. To receive a notification when TRACY TAG is in range of the device or is found by the Find My network, turn on "Notify me when tracking" in the Notifications section.

If a device stays within the range of operation of TRACY TAG's Bluetooth® for a prolonged period, the Find My app will send you a notification.

If TRACY TAG stays still for a long time, it will enter the movement detection mode. Once this function is activated, a beep notification will be activated.

TECHNICAL SPECIFICATIONS

Dimensions: 37 mm x 37 mm x 9 mm

Materials: Polycarbonate

Battery: CR2032 non-rechargeable

Operating temperature: -20°C to 60°C

Bluetooth®: Low energy Bluetooth®

Bluetooth®: 4.2 (Bluetooth 4.0 in brackets)

Operating temperature: -20°C to 60°C

Frequency Band: 2400 MHz to 2483.5 MHz

Power consumption: 2400 MHz to 2483.5 MHz

POTENTIAL PROBLEMS

1. Check the battery and make sure it is inserted correctly.

2. Reset the device.

3. Remove the battery and put it back inside its compartment.

BATTERY (20)

1. The battery is a button battery. You might need to replace the battery during the product's life cycle. Only replace it with the same type of battery (CR2032) and in the same direction as the original.

You can monitor the battery level on the Find My app. When the battery is running low, you will receive a notification.

Replacing the battery:

- Open the battery compartment by turning the back cover as the arrows on the back cover indicate.
- Remove the battery.
- Insert the new battery into the device with the positive side (+) facing upwards.
- Connect the top and bottom covers by turning and pressing firmly.

TRACY TAG is designed to avoid any unwanted tracking.

When you have finished using the device for an extended period of time, you will receive a notification in one of the two following ways:

- If you have an iPhone, iPad or iPod touch, the Find My app will send a notification to your Apple device. This function is available on iOS/iPadOS 14.5 or later.
- If you do not have an iOS device, TRACY TAG will make a repeated sound over time. These functions have been specifically created to deter people from trying to track you without your permission.

IT-REQUISITI PRINCIPALI

Prima di configurare TRACY TAG verificare di essere in possesso dei seguenti requisiti:

- Dispositivo Apple (iPhone® 6S in su, iPad®, iPod touch®) con iOS/iPadOS 14.5 o versioni successive.
- Funzione DoV attivata.
- Connessione a Internet.
- Buona connessione cellulare o Wi-Fi.
- Funzione localizzazione attivata.
- Attivare la localizzazione per l'app DoV. Per farlo è necessario andare su Impostazioni > Sicurezza e privacy > "Rubriche" > "Localizzazione" > "DoV".

SELEZIONARE "MENTRE USI L'APP", "DOPODICHE, ATTIVARE" "POSIZIONE ESATTA"

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

ATTIVAZIONE E SPOSTAMENTO

1. Premere il bottone laterale di TRACY TAG fino a che non si sente un lungo beep.

2. Premere il bottone laterale di TRACY TAG per 5 secondi fino a che non si sentono 3 beep consecutivi.

RESETTING

1. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

2. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

ACCENDERE IL DEVICE

1. Accendere il device.

2. Appre "Fav" "DoV" e toccare l'icona dell'oggetto.

3. Premere il bottone laterale di TRACY TAG una volta (lungo beep).

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

DE WICHTIGSTE AANBEVELINGEN

Bevor Sie TRACY TAG konfigurieren, sollten Sie überprüfen, ob Sie die folgenden Voraussetzungen für die Konfiguration erfüllen:

1. Ein Apple-Gerät (iPhone® 6S oder höher, iPad® oder iPod touch®) mit iOS 14.5, iPadOS 14.5 oder höher und Zwei-Faktor-Authentifizierung aktiviert.

2. Internetverbindung.

3. Funktionierendes WLAN-Netzwerk.

4. Funktionierendes Mobilfunknetz.

5. Ein aktives Mobilfunknetz.

6. Ein aktives Mobilfunknetz.

REMOVING TRACY TAG

1. Open the "Find My" app and press the object icon.

2. Press "Remove" to remove the object from the Find My app.

Note: after you have removed TRACY TAG from the app, the device will remain on stand-by for 60 seconds before it automatically powers off.

FINDING REMOVED OBJECTS

1. Open the Find My app, then press the Objects panel.

2. Select the object you want to track and tap on it to hear a sound.

3. Press "Ring" if TRACY TAG is in Bluetooth® range, it will make a sound.

4. If the object is not in range, it will vibrate automatically, press "Stop".

FINDING AIRMAY OBJECTS

1. Press "Find My" to activate the Find My app.

2. Press "Find My" to activate the Find My app.

3. To receive a notification when TRACY TAG is in range of the device or is found by the Find My network, turn on "Notify me when tracking" in the Notifications section.

If a device stays within the range of operation of TRACY TAG's Bluetooth® for a prolonged period, the Find My app will send you a notification.

If TRACY TAG stays still for a long time, it will enter the movement detection mode. Once this function is activated, a beep notification will be activated.

TECHNICAL SPECIFICATIONS

Dimensions: 37 mm x 37 mm x 9 mm

Materials: Polycarbonate

Battery: CR2032 non-rechargeable

Operating temperature: -20°C to 60°C

Bluetooth®: Low energy Bluetooth®

Bluetooth®: 4.2 (Bluetooth 4.0 in brackets)

Operating temperature: -20°C to 60°C

Frequency Band: 2400 MHz to 2483.5 MHz

Power consumption: 2400 MHz to 2483.5 MHz

POTENTIAL PROBLEMS

1. Check the battery and make sure it is inserted correctly.

2. Reset the device.

3. Remove the battery and put it back inside its compartment.

BATTERY (20)

1. The battery is a button battery. You might need to replace the battery during the product's life cycle. Only replace it with the same type of battery (CR2032) and in the same direction as the original.

You can monitor the battery level on the Find My app. When the battery is running low, you will receive a notification.

Replacing the battery:

- Open the battery compartment by turning the back cover as the arrows on the back cover indicate.
- Remove the battery.
- Insert the new battery into the device with the positive side (+) facing upwards.
- Connect the top and bottom covers by turning and pressing firmly.

TRACY TAG is designed to avoid any unwanted tracking.

When you have finished using the device for an extended period of time, you will receive a notification in one of the two following ways:

- If you have an iPhone, iPad or iPod touch, the Find My app will send a notification to your Apple device. This function is available on iOS/iPadOS 14.5 or later.
- If you do not have an iOS device, TRACY TAG will make a repeated sound over time. These functions have been specifically created to deter people from trying to track you without your permission.

IT-REQUISITI PRINCIPALI

Prima di configurare TRACY TAG verificare di essere in possesso dei seguenti requisiti:

- Dispositivo Apple (iPhone® 6S in su, iPad®, iPod touch®) con iOS 14.5, iPadOS 14.5 o versioni successive.
- Funzione DoV attivata.
- Connessione a Internet.
- Buona connessione cellulare o Wi-Fi.
- Funzione localizzazione attivata.
- Attivare la localizzazione per l'app DoV. Per farlo è necessario andare su Impostazioni > Sicurezza e privacy > "Rubriche" > "Localizzazione" > "DoV".

SELEZIONARE "MENTRE USI L'APP", "DOPODICHE, ATTIVARE" "POSIZIONE ESATTA"

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

ATTIVAZIONE E SPOSTAMENTO

1. Premere il bottone laterale di TRACY TAG fino a che non si sente un lungo beep.

2. Premere il bottone laterale di TRACY TAG per 5 secondi fino a che non si sentono 3 beep consecutivi.

RESETTING

1. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

2. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

ACCENDERE IL DEVICE

1. Accendere il device.

2. Appre "Fav" "DoV" e toccare l'icona dell'oggetto.

3. Premere il bottone laterale di TRACY TAG una volta (lungo beep).

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

DE WICHTIGSTE AANBEVELINGEN

Bevor Sie TRACY TAG konfigurieren, sollten Sie überprüfen, ob Sie die folgenden Voraussetzungen für die Konfiguration erfüllen:

1. Ein Apple-Gerät (iPhone® 6S oder höher, iPad® oder iPod touch®) mit Mac OS 14.5, iPadOS 14.5 oder höher und Zwei-Faktor-Authentifizierung aktiviert.

2. Internetverbindung.

3. Funktionierendes WLAN-Netzwerk.

4. Funktionierendes Mobilfunknetz.

5. Ein aktives Mobilfunknetz.

6. Ein aktives Mobilfunknetz.

REMOVING TRACY TAG

1. Open the "Find My" app and press the object icon.

2. Press "Remove" to remove the object from the Find My app.

Note: after you have removed TRACY TAG from the app, the device will remain on stand-by for 60 seconds before it automatically powers off.

FINDING REMOVED OBJECTS

1. Open the Find My app, then press the Objects panel.

2. Select the object you want to track and tap on it to hear a sound.

3. Press "Ring" if TRACY TAG is in Bluetooth® range, it will make a sound.

4. If the object is not in range, it will vibrate automatically, press "Stop".

FINDING AIRMAY OBJECTS

1. Press "Find My" to activate the Find My app.

2. Press "Find My" to activate the Find My app.

3. To receive a notification when TRACY TAG is in range of the device or is found by the Find My network, turn on "Notify me when tracking" in the Notifications section.

If a device stays within the range of operation of TRACY TAG's Bluetooth® for a prolonged period, the Find My app will send you a notification.

If TRACY TAG stays still for a long time, it will enter the movement detection mode. Once this function is activated, a beep notification will be activated.

TECHNICAL SPECIFICATIONS

Dimensions: 37 mm x 37 mm x 9 mm

Materials: Polycarbonate

Battery: CR2032 non-rechargeable

Operating temperature: -20°C to 60°C

Bluetooth®: Low energy Bluetooth®

Bluetooth®: 4.2 (Bluetooth 4.0 in brackets)

Operating temperature: -20°C to 60°C

Frequency Band: 2400 MHz to 2483.5 MHz

Power consumption: 2400 MHz to 2483.5 MHz

POTENTIAL PROBLEMS

1. Check the battery and make sure it is inserted correctly.

2. Reset the device.

3. Remove the battery and put it back inside its compartment.

BATTERY (20)

1. The battery is a button battery. You might need to replace the battery during the product's life cycle. Only replace it with the same type of battery (CR2032) and in the same direction as the original.

You can monitor the battery level on the Find My app. When the battery is running low, you will receive a notification.

Replacing the battery:

- Open the battery compartment by turning the back cover as the arrows on the back cover indicate.
- Remove the battery.
- Insert the new battery into the device with the positive side (+) facing upwards.
- Connect the top and bottom covers by turning and pressing firmly.

TRACY TAG is designed to avoid any unwanted tracking.

When you have finished using the device for an extended period of time, you will receive a notification in one of the two following ways:

- If you have an iPhone, iPad or iPod touch, the Find My app will send a notification to your Apple device. This function is available on iOS/iPadOS 14.5 or later.
- If you do not have an iOS device, TRACY TAG will make a repeated sound over time. These functions have been specifically created to deter people from trying to track you without your permission.

IT-REQUISITI PRINCIPALI

Prima di configurare TRACY TAG verificare di essere in possesso dei seguenti requisiti:

- Dispositivo Apple (iPhone® 6S in su, iPad®, iPod touch®) con iOS 14.5, iPadOS 14.5 o versioni successive.
- Funzione DoV attivata.
- Connessione a Internet.
- Buona connessione cellulare o Wi-Fi.
- Funzione localizzazione attivata.
- Attivare la localizzazione per l'app DoV. Per farlo è necessario andare su Impostazioni > Sicurezza e privacy > "Rubriche" > "Localizzazione" > "DoV".

SELEZIONARE "MENTRE USI L'APP", "DOPODICHE, ATTIVARE" "POSIZIONE ESATTA"

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

ATTIVAZIONE E SPOSTAMENTO

1. Premere il bottone laterale di TRACY TAG fino a che non si sente un lungo beep.

2. Premere il bottone laterale di TRACY TAG per 5 secondi fino a che non si sentono 3 beep consecutivi.

RESETTING

1. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

2. Premere il bottone laterale 5 volte successivamente tenendo premuto fino a quando si sentono 3 beep lunghi (rimuovere TRACY TAG dall'app "DoV" prima di resettarlo).

ACCENDERE IL DEVICE

1. Accendere il device.

2. Appre "Fav" "DoV" e toccare l'icona dell'oggetto.

3. Premere il bottone laterale di TRACY TAG una volta (lungo beep).

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

CR2032

1. Aprire l'app "Trova".

2. Toccare "Attivare".

3. Toccare "Posizione esatta".

DE WICHTIGSTE AANBEVELINGEN

Bevor Sie TRACY TAG konfigurieren, sollten Sie überprüfen, ob Sie die folgenden Voraussetzungen für die Konfiguration erfüllen:

1. Ein Apple-Gerät (iPhone® 6S oder höher, iPad® oder iPod touch®) mit Mac OS 14.5, iPadOS 14.5 oder höher und Zwei-Faktor-Authentifizierung aktiviert.

2. Internetverbindung.

3. Funktionierendes WLAN-Netzwerk.

4. Funktionierendes Mobilfunknetz.

5. Ein aktives Mobilfunknetz.

6. Ein aktives Mobilfunknetz.

REMOVING TRACY TAG

1. Open the "Find My" app and press the object icon.

2. Press "Remove" to remove the object from the Find My app.

Note: after you have removed TRACY TAG from the app, the device will remain on stand-by for 60 seconds before it automatically powers off.

FINDING REMOVED OBJECTS

1. Open the Find My app, then press the Objects panel.

2. Select the object you want to track and tap on it to hear a sound.

3. Press "Ring" if TRACY TAG is in Bluetooth® range, it will make a sound.

4. If the object is not in range, it will vibrate automatically, press "Stop".

FINDING AIRMAY OBJECTS

</

