
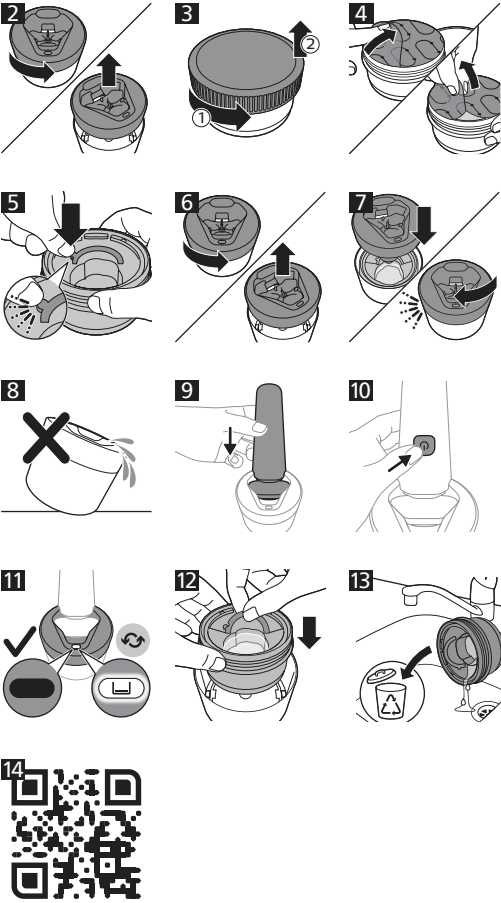


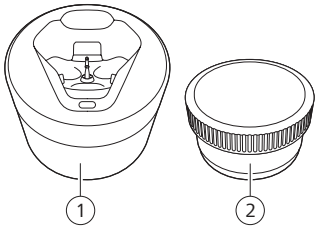

English

Important safety information

Only use the product for its intended purpose. Read this important information carefully before you use the product, and save it for future reference. Misuse can lead to hazards or serious injuries.

Warning

- Only use the Quick Clean Pod, the Quick Clean Pod cartridge and its cleaning fluid to clean your Philips shaver.
- Only use the Quick Clean Pod in combination with original Philips Quick Clean Pod cartridges.
- Do not put any other fluid in the Quick Clean Pod cartridges.
- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.
- Always make sure the cartridge compartment is closed before you use the cleaning system.
- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.

Philips Quick Clean Pod Cartridge fluid

- Keep out of reach of children.
- Do not swallow.

How do I use the Quick Clean Pod?

Preparing the Quick Clean Pod for use

- 1 Twist and remove the top of the Quick Clean Pod (Fig. 2).
- 2 Twist the lid off of the Quick Clean Pod Cartridge (Fig. 3).
- 3 Lift the tab on the seal and pull it by the corner to remove the seal from the Quick Clean Pod Cartridge (Fig. 4).
- 4 Press the small circular piece on the handle of the Quick Clean Pod Cartridge to break the snap hook on the handle (Fig. 5).
- 5 Place the Quick Clean Pod Cartridge into the Quick Clean Pod (Fig. 6).
- 6 Put the top of the Quick Clean Pod back onto the base and turn it clockwise until you hear a click (Fig. 7).

Do not tilt the Quick Clean Pod to prevent leakage (Fig. 8).

Using the Quick Clean Pod

Note: If you use the shaver with shaving foam, shaving gel or pre-shave products, thoroughly rinse the shaving heads before you use the Quick Clean Pod.

Always shake excess water off the shaver before you place it in the Quick Clean Pod.

- 1 Place the shaver upside down into the Quick Clean Pod (Fig. 9). The shaver automatically detects that it is in the Quick Clean Pod.
- 2 Switch on the shaver to start the cleaning program (Fig. 10).

Each cleaning program takes approximately one minute. During the cleaning program the cleaning symbol lights up continuously and the blue icon pulses.

The shaver handle vibrates twice quickly when the cleaning program is finished.

- 3 Let the shaver air-dry completely in the Quick Clean Pod before storing it.

Replacing the Quick Clean Pod Cartridge

Replace the Quick Clean Pod Cartridge immediately when the cartridge replacement icon on the Quick Clean Pod becomes visible (Fig. 11) or follow the table below.

Frequency of use	Cycles	When to replace the Quick Clean Pod Cartridge
Every day	About 30	Every month
A few times per week	About 20	Every 2 months
Every week	About 13	Every 3 months
Every month	About 3	Every 3 months

- 1 Twist and remove the top of the Quick Clean Pod (Fig. 6).
- 2 Lift the Quick Clean Pod Cartridge out of the Quick Clean Pod by the handle (Fig. 12).
- 3 Pour any remaining fluid down a drain and recycle the empty cartridge in accordance with local waste regulations (Fig. 13).

- 4 Place a new Quick Clean Pod Cartridge into the Quick Clean Pod.
- 5 Scan the QR code (Fig. 14) or visit www.philips.com/cleaning-cartridge to order replacement Quick Clean Pod Cartridges.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- CC13 Philips Quick Clean Pod Cartridge 3-pack
- CC16 Philips Quick Clean Pod Cartridge 6-pack
- CC18 Philips Quick Clean Pod Cartridge 8-pack

Note: The availability of the accessories may differ by country.

Philips Quick Clean Pod

Problem	Possible cause	Solution
My shaver isn't clean after using the Philips Quick Clean Pod.	You removed the shaver before the cleaning program was finished.	Leave the shaver in the Philips Quick Clean Pod for the full cleaning program. Each cleaning program takes approximately 1 minute. The cleaning icon goes out when the cleaning program is finished.
	The Philips Quick Clean Pod Cartridge needs to be replaced.	Replace the Philips Quick Clean Pod Cartridge.
	The Philips Quick Clean Pod is tilted.	Place the Philips Quick Clean Pod on a flat surface.
My Philips Quick Clean Pod does not switch on.	The Philips Quick Clean Pod is powered by the motor of the shaver.	Place the shaver into the Philips Quick Clean Pod. Switch on the shaver.
	The shaver is connected to the wall socket.	Disconnect the shaver from the supply unit.
	The shaver battery is empty.	Charge the shaver before using the Philips Quick Clean Pod.
My Philips Quick Clean Pod is overflowing.	You regularly use the Philips Quick Clean Pod after rinsing the shaver but not shaking off excess water.	Shake off excess water after rinsing the shaving heads each time before putting the shaver into the Philips Quick Clean Pod.
	You shaved with shaving gel or foam and did not rinse the shaver before using the Philips Quick Clean Pod.	Rinse the shaving heads thoroughly before using the Philips Quick Clean Pod.

Recycling

- Pour any remaining cartridge fluid down a drain.
- Dispose of Quick Clean cartridges and the Quick Clean Pod in accordance with local waste or recycling regulations.