

brennenstuhl®



RL 6000 N



RL 6001 N



RL 12000 N



RL 12001 N

Scannen für detaillierte Anleitung

Scan for detailed guide

Scanner la notice d'utilisation détaillée

Scan voor gedetailleerde handleiding

Scansiona per istruzioni dettagliate

DE Kurzanleitung

EN Quick guide

FR Guide de configuration rapide

NL Snelle handleiding

IT Guida veloce

SE Instruktionsguide

ES Instrucciones rápidas

PL Skrócony przewodnik

CZ Rychlý průvodce

HU Gyorstalpaló útmutató

RU Краткое руководство

TR Çabuk kılavuz

FI Pikaopastus

GR Γρήγορος οδηγός

PT Guia depressa

EE Kiire juhend

SK Rýchly sprievodca

SI Kratek vodnik

LT Trumpasis vadovas

LV Ātrā rokasgrāmata

HR Vodič za brzi početak

RO Ghid de scurtă durată

BG Бързо ръководство

NO Hurtigveiledning


UA Короткий посібник



RL 6000 N




RL 6001 N

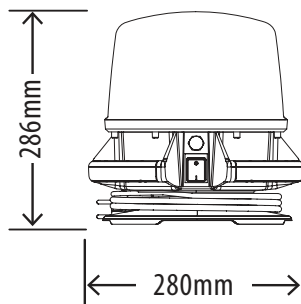

RL 12000 N



RL 12001 N

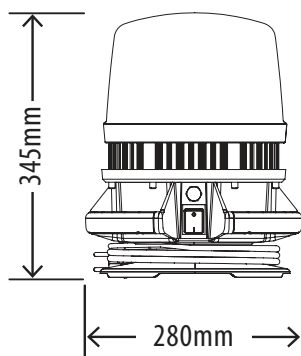



RL 12000 N

1x → 100%
3x → 25%



2x → 50%




RL 12001 N



RL 6000 N



1x → ON

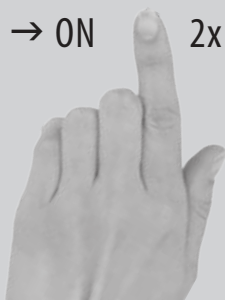

2x → OFF



RL 6001 N

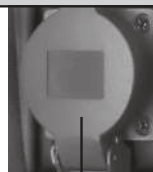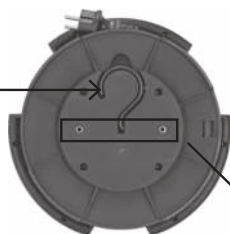

1x

