



# DE Ersatzfilter für Heißwasserspender

(1841 & 1861)

COSO<sup>®</sup>  
DESIGN

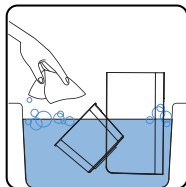


**1.** Waschen Sie Ihre Hände und reinigen Sie den Wassertank und den Filterbehälter.

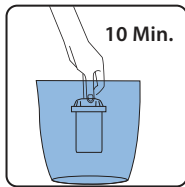


**2.** Entnehmen Sie den Wasserfilter aus der Verpackung und lassen Sie ihn in frischem Leitungswasser einweichen.



**3.** Spülen Sie den Filter unter fließendem Wasser ab.

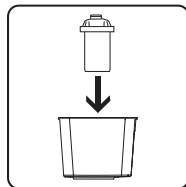

**4.** Setzen Sie den Filter in den Filterbehälter ein, sodass er fest sitzt. Ziehen Sie ihn dafür mit einer leichten Drehbewegung und etwas Druck nach unten.

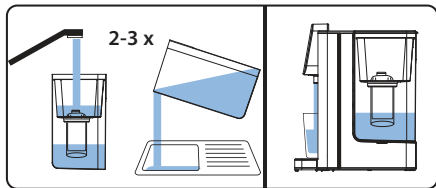


**5.** Setzen Sie den Filterbehälter in den Wassertank. Lassen Sie 2-3 Mal jeweils 1 Liter Wasser durch den Filter laufen, bevor Sie das Wasser trinken.


- ▶ Sie können mit dem Filter 160 Liter Wasser filtern.
- ▶ Erneuern Sie den Filter alle 4-6 Wochen.
- ▶ Trotz vorherigem Einweichen können während der Verwendung wenige schwarze Aktivkohle-Partikel aus dem Filter austreten. Diese sind unbedenklich.
- ▶ Achten Sie darauf, dass der Filterboden stets in Kontakt mit Wasser bleibt und nicht austrocknet. Wenn der Filter austrocknet, weichen Sie ihn erneut für 10 Minuten ein.
- ▶ Lassen Sie das Wasser nicht länger als 48 Stunden im Wassertank stehen. Befüllen Sie den Wassertank neu.
- ▶ Bewahren Sie den Wassertank mit Filter an einem kühlen Ort auf und halten Sie diese aus direktem Sonnenlicht fern.

# EN Replacement filter for boiling water dispenser (1841 & 1861)


COSO<sup>®</sup>  
DESIGN

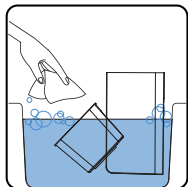


**1.** Wash your hands and clean the water tank and the filter box.

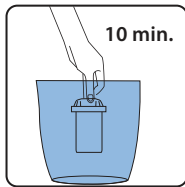


**2.** Remove the filter from the packaging and soak it in fresh tap water.

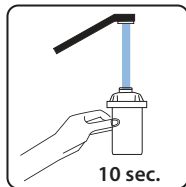

**3.** Rinse the filter under running water.

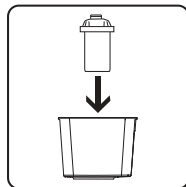

**4.** Insert the filter into the filter box so that it is securely in place. To do this, pull it down with a slight twisting motion and a little pressure.

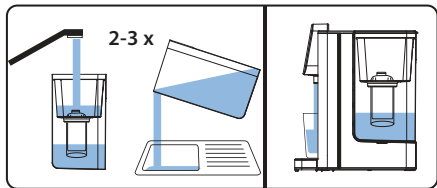

**5.** Place the filter box in the water tank. Run 1 litre of water through the filter 2-3 times before drinking the water.

- ▶ You can filter 160 litres of water with the filter.
- ▶ Replace the filter every 4-6 weeks.
- ▶ Despite previous soaking, a few black activated carbon particles may escape from the filter during use. These are harmless.
- ▶ Make sure that the filter bottom always remains in contact with water and does not dry out. If the filter dries out, soak it again for 10 minutes.
- ▶ Do not leave the water in the water tank for more than 48 hours. Refill the water tank.
- ▶ Store the water tank with filter in a cool place and keep it out of direct sunlight. Keep them out of direct sunlight.