

Operating instructions

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the points listed below. Read all instructions and safeguards before using.

WARNING:

To reduce the risk of injury or death by electric shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately from the outlet.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it in or drop into water or other liquid.
- Always unplug this appliance before the electrical outlet immediately after using.
- Avoid touching this appliance before drying.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Warning: Keep the Product Dry! It is essential to PREVENT electrical equipment from coming into contact with water or other liquids.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Keep the cord away from heated surfaces.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use the appliance with a damaged or broken cord nor with fraying missing from the blades, as injury may occur.

SAVE THESE INSTRUCTIONS

This tool is not designed for household use.

- | | |
|--|-----------------|
| A - Bottom blade | D - Switch |
| B- Blade slide (on Multi-cut (MC) clipper only) | E- Top blade |
| C - Taper lever (on Multi-cut (MC) clipper only) | F - Power screw |

CLIPPER MAINTENANCE

Your Wahl clipper blades were oiled and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- End of top blade teeth should be approximately 1/32" (64 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
- Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL (I)

The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not stick down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

Your clipper has a power screw, used to be adjusted for peak efficiency before leaving the factory. However, if voltage in your home is low, you may need to readjust it.

To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power out (counterclockwise), just until noise stops. Turn to the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original box or storage pouch (if provided).

If your clipper has a polarized plug: To reduce the risk of electric shock, this appliance has a polarized plug that will only fit one way. If it does not fit one way, do not force it in. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted for a close cut or a longer cut.

The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. (diagram K)

The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the blades without the need to turn the clipper. When the taper lever is turned, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades clear of hair. If your clipper stops cutting and this does not help, your cutting blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair

- 2 yr kit includes a plastic cape, used to protect around the neck, tying the strings and overlapping the cape portion to prevent hair from falling down inside the collar. If no cape is provided, a towel will do.
- Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.
- After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the rampside (the side with the teeth) facing the person's hair. The clipper will help you maintain control, accurate cutting control.

NOTE: To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs – allowing multiple cutting lengths in the convenience of a single comb.

Individual Guide Combs – providing predetermined lengths indicated on each guide comb.

Individual Color Guide Combs – providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide combs:

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M) The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have positive click stops and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1) The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Some kits do not include all Wahl guide combs. However, any of these combs (or additional accessories not listed here) may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL GUIDE COMBS LISTING:

- | | |
|-------------------------------|-------------------------------|
| • 3mm - Black/Red | • 6mm - Black/Purple |
| • 10mm - Black/Dark Blue | • 13mm - Black/Orange/Pink |
| • 16mm - Black/Yellow | • 19mm - Black/Lavender |
| • 22mm - Black/Green | • 25mm - Black/Light Blue |
| • 31mm - Black/White | • 38mm - Black/White |
| • Left Ear Taper - Black only | • Left Ear Taper - Black only |

CUTTING HAIR

FOR MEDIUM TO LONG CUTS. (P)

The first time you cut your hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Cutting over the comb or grasping the comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that well-kept-look.

For uniform cutting, allow the clipper to cut its way through the hair. Do not force it through at a faster rate.

- Start by cutting the hair so it falls into its natural direction.
- Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards. Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and over the hair, cutting only a small amount at a time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide combs) or apply more pressure and less lift away from the head with the present attachment.

This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

For the top of the head, you will give a fairly short cut if you use the 1" guide comb (L) or a 1-1/2" (M) or 1-1/2" (N) guide comb, you may use this for a slightly longer cut. With the teeth flat against the head, slowly raise the trimmer from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By using a guide comb, a longer cut can be achieved. Use either a barber comb or regular comb and lift the hair from the top of the head, cutting over the comb. Do not force it through at a faster rate.

This procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb or fingers and the head. Comb frequently to remove trimmed hair and check for uneven strands.

TAPERING AROUND EARS:

USING LEFT AND RIGHT EAR GUIDE COMBS: The adjustable guide comb has built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper blending without having to use multiple combs.

TO TAPER THE AREA BORDERING THE LEFT EAR:

Attach the Left Ear Taper Comb to your clipper and stand facing the left ear. While holding the clipper at a slight angle attach the head, position the guide comb just back of the left ear at the hairline. Then move the clipper in a small hair circle pattern around the ear, holding the clipper up to the hair. Depending on the length of hair you are working with you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the clipper upward and outward being mindful of the result. This will allow you to guide hair into the comb towards the clipper's taper.

Note: You may also achieve a tapering of sideburns by including the sideburn area as you begin to move the clipper around the ear.

TO TAPER THE AREA BORDERING THE RIGHT EAR:

Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.

Finish by cutting the area around the ear as described in the following section.

OUTLINING: (R)

On attachments are needed. (On a multi-cut clipper, push the taper lever up to the "close-cut" position.) Comb hair into desired style. Starting between the ear and the sideburns, as shown at left, hold clipper with corner edge of blade against the hairline. Slowly follow the desired outline of the hair over, around and behind the ears. For forming sideburns and the back of the neck, hold the clipper up to the hair, against the skin at the desired length and move down. Comb hair and check that sides are even. Check for uneven spots throughout the haircut.

CREW CUTS AND SHORT CUTS (R)

Starting with the longest guide comb, cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair, as shown.


Use the same procedure to taper the upper side of the head, as shown. Then cut the hair against the direction in which it grows, from the front to the crown, and even up to the cut with the sides.


To give a "flat-top" look, the hair on top of the head must be cut over the top of a flat comb, rather than using the guide comb.

Use clippers using guide combs to "taper" the hair down to the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and neckline as previously described.

If a short, tapered cut on the sides and back is desired, follow diagram S.

The five basic areas illustrated on the Wahl haircutting guide are your "road map" to easy, do-it-yourself haircutting. For tips on the latest trends and fashions in haircutting, visit us at www.wahl.com.

If you reside within the EU and your unit is marked with the following symbol  do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

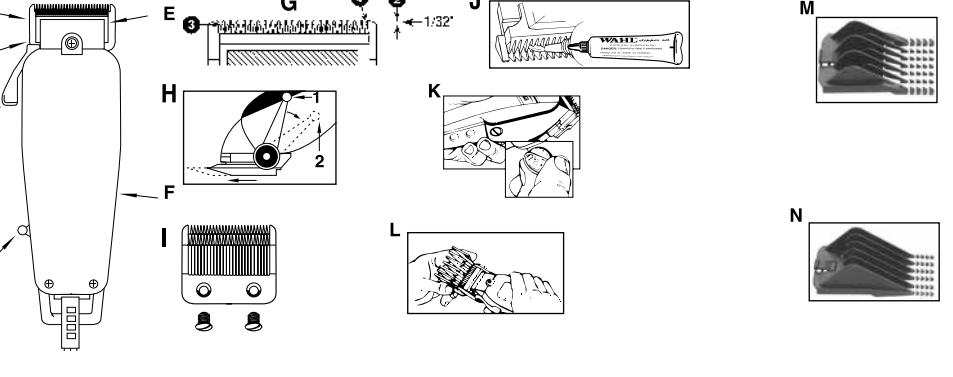

Gebrauchsanweisung

WICHTIGE SICHERHEITSHINWEISE

Beim Gebrauch eines Elektrogerätes sollten immer grundlegende Vorsichtsmaßnahmen beachtet werden, insbesondere die folgenden aufgeführten. Lesen Sie vor Gebrauch alle Anweisungen und Sicherheitshinweise sorgfältig durch.

GEFÄHR

- Vermeiden Sie das Risiko einer Verletzung oder des Todes durch einen elektrischen Schlag.
- Griffen Sie nicht nach innen ins Wasser gefüllten Gerät. Ziehen Sie sonst den Stecker aus der Steckdose.
- Verwenden Sie das Gerät nicht in der Badewanne oder unter der Dusche.
- Platzieren Sie das Gerät bei Verwendung in der Nähe von Wasser (z. B. in Waschbecken oder eine Wanne füllt) oder gezeugen werden könnte. Touchen Sie das Gerät nicht in Wasser oder anderen Flüssigkeiten und lassen Sie sich nicht dort hängen fallen.
- Ziehen Sie außer wenn Sie das Gerät aufladen, nach jedem Gebrauch den Stecker des Geräts aus der Steckdose.
- Ziehen Sie vor dem Reinigen des Gerätes immer den Stecker aus der Steckdose.

WARNING

To Reduce the Risk of Injury or Death:

- Dieses Gerät kann von Kindern ab 8 Jahren und Personen mit eingeschränkter physischer, sensorischer oder geistiger Fähigkeiten oder Personen mit mangelnder Erfahrung und Wissen verwendet werden, solange dies unter Beaufsichtigung erfolgt oder sie die notwendige Anleitung zum sicheren Umgang mit diesem Gerät erhalten haben und über die damit verbundenen Gefahren informiert sind. Das Gerät darf von Kindern nicht als Spielzeug verwendet werden. Reinigung und Wartung dürfen von Kindern nur unter angemessener Aufsicht durchgeführt werden.
- Warnung: Halten Sie das Gerät trocken. Es ist äußerst wichtig zu VERHINDERN, dass Elektrogeräte in Kontakt mit Wasser oder anderen Flüssigkeiten kommen.

• Verwenden Sie dieses Gerät ausschließlich zum vorgesehenen und in dieser Gebrauchsanweisung beschriebenen Zweck. Verwenden Sie ausschließlich vom Hersteller empfohlenes Zubehör.

• Verwenden Sie dieses Gerät nur, wenn sein Hersteller oder -stecker beschriftete oder -stecker beschriftete funktionelle Informationen oder beschriftet worden ist oder der Wasser gefüllten ist. Senden Sie das Gerät zur Instand- und zur Reparatur an die Wahl Clipper Corporation.

• Schließen Sie ausschließlich das Kabel an Ladegeräte in die entsprechende Buchse des Gerätes an.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

HEBEN SIE DIESE ANLEITUNG SORGFÄLTIG AUF

Diese Haarschneidemaschine ist für den privaten Gebrauch bestimmt.

- | | |
|--|---------------------------------|
| A - Hintere Klinge | D - Schalter |
| B - Klingelängereivrichtung (nur bei Multi-cut-Haarschneidemaschinen (MC)) | E - Obere Klinge |
| C - Schnittlängeingröße (nur bei Multi-cut-Haarschneidemaschinen (MC)) | F - Fraubraue für Leistungswahl |

WARTUNG DER HAARSCHNEIDEMASCHINE

Die Klingen der Haarschneidemaschine von Wahl sind werksseitig peilt und ausgerichtet worden. Dennoch kann die Verschmutzung, das Abschürfen der Klingen nicht mehr stimmt und eine Neuausrichtung erforderlich wird. Klingen müssen neu ausgerichtet werden, wenn sie für Reinigungs- oder Austauschzwecke entnommen worden sind. Um festzustellen, ob eine Neuausrichtung erforderlich ist, vergleichen Sie Ihre Klingen Haarschneidemaschine mit derer Zeichnung. (G)

1 Wenn die Haarschneidemaschine mit einem Schnittlängeingröße ausgerüstet ist, stellen Sie Ihre den Schnittlängeingröße auf die Stufe mit der kürzesten Schnittlänge ein. (H)

2 Das Ende der Zähne der Klinge sollte etwa 0,64 mm (1/32 in.) hinter der unteren Klinge zurückstecken. Dies ist wichtig, damit die Haarschneidemaschine nicht zu kurz schneiden und damit der Schneidesitz bei der Bewegung nicht übermäßig verschleißt.

3 Der äußerste linke Zahn der oberen Klinge muss den ersten kleinen Zahn der unteren Klinge abdecken oder sich links neben diesem befinden.

4 Der äußerste rechte Zahn der oberen Klinge muss den großen Zahn der unteren Klinge berühren.

Wenn die Klingen falsch ausgerichtet sind, geben Sie einige Tropfen Wahl Clipper Öl auf die Klingen, stellen Sie die Haarschneidemaschine kurz auf "Ein", (Ein), dann auf "Off" (Aus), und ziehen Sie den Netzstecker des Geräts ab. Benutzen Sie ausschließlich das Kabel an Ladegeräte in die entsprechende Buchse der Maschine mit den beschriebenen Aufschrift der 2-Wechselstecker verwenden, nachdem Sie die Klingen ausgerichtet haben.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

• Gebrauchen Sie dieses Gerät nicht im Freien und nicht in Räumen, in denen Aerosol-Sprays oder Gasvernebler verwendet werden.

• Schließen Sie das Kabel immer zuerst am Gerät, anschließend an der Steckdose an und das Gerät vom Stromnetz zu trennen, schalten Sie zu zuerst aus OFF und ziehen Sie dann den Stecker aus der Steckdose.

</

