



RENEGADE

PURE AUDIO ENGINES



RSM SERIES

SLIM MULTI-USE SPEAKERS

INSTALLATION

The first step of installing a speaker system is thorough planning. Choose a suitable location for your speaker components carefully. Follow these suggestions to ensure proper imaging and maximum performance:

1. Choose a location that offers the least amount of obstruction between the components and your ears.
2. Try to mount the speakers on the same plane. That is, they should be at the same height and directly across from each other. Do not mount one speaker higher, lower, further forward or further back from the opposite speaker.
3. Always check behind the chosen mounting locations to ensure that there is proper clearance for the back of the speakers and avoid obstructions.
4. Maximum performance is achieved when the speaker is securely mounted to a door panel or rear speaker deck. There should be no gaps between the speaker basket and the mounting surface.

WIRING DIAGRAM AND INTERCONNECTION


SPEAKER CONNECTION:

- Connect the Plus-Terminal of the loudspeaker (marked with an cross) with the Plus-Terminal of the amplifier's speaker outputs (e.g. + L).
- Connect the Minus-Terminal of the loudspeaker with the Minus-Terminal of the amplifier's speaker outputs (e.g. - L).
- Repeat the procedure for all other regarding Speakers and Channels.

CAUTION

Please ensure the correct polarity (+ or -) for all connections.

Never connect loudspeakers directly with the vehicle's chassis or power supply.

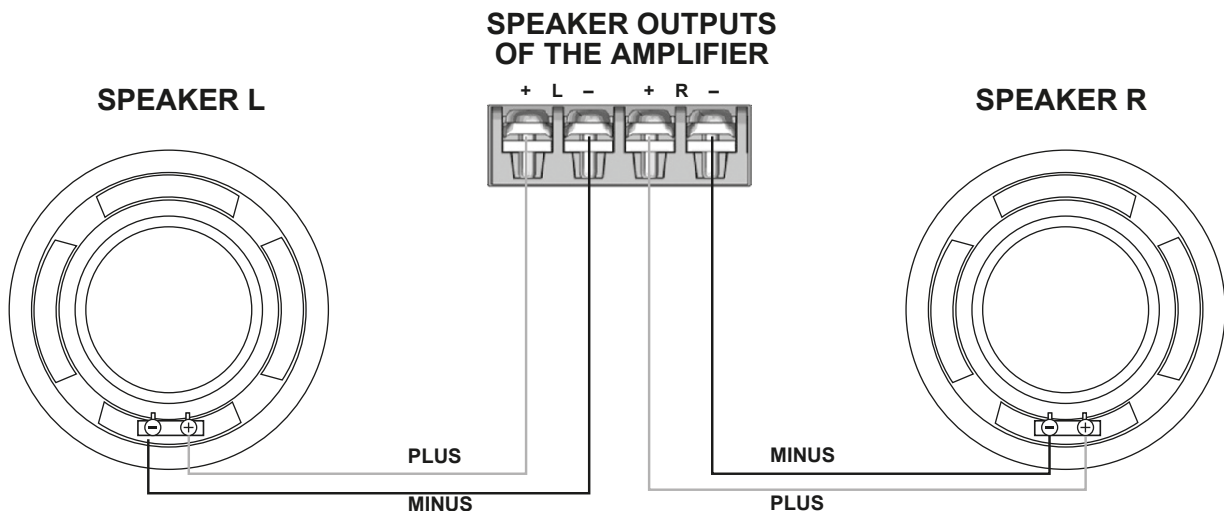

EINBAUANLEITUNG

Der erste Schritt bei der Installation des Lautsprecher Systems sollte die sorgfältige Planung sein. Wählen Sie eine geeignete Stelle für den Einbau der einzelnen Komponenten sorgfältig aus. Folgen Sie einfach diesen Vorschlägen um das bestmögliche Resultat zu erreichen.

1. Wählen Sie eine Position für die einzelnen Komponenten, bei der das Signal am besten ohne Hindernisse im Raum verteilt wird.
2. Montieren Sie die Lautsprecher auf der linken bzw. rechten Seite in der selben Anordnung. Vermeiden Sie wenn möglich, dass ein Lautsprecher höher, tiefer, weiter weg oder näher wie der dazu gegenüber liegende Lautsprecher montiert wird.
3. Überprüfen Sie vor dem Bohren von Montagelöchern für die Lautsprecher immer, was sich hinter der gewählten Montagefläche befindet.
4. Sie erreichen das beste Klangresultat, wenn die Lautsprecher fest montiert werden. Lücken oder lose Stellen zwischen Lautsprecherkorb und Montageoberfläche sollten abgedämmt bzw. geschlossen werden.


VERKABELUNG UND ANSCHLUSS

LAUTSPRECHERANSCHLUSS:

- Verbinden Sie den Pluspol des Lautsprechers (mit Plus gekennzeichnet) mit dem Pluspol des Lautsprecherausgangs ihres Verstärkers (z.B. + L).
- Verbinden Sie den Minuspol des Lautsprechers mit dem Minuspol des Lautsprecherausgangs Ihres Verstärkers (z.B. - L).
- Wiederholen Sie die Prozedur für alle relevanten Lautsprecher und Kanäle.

ACHTUNG

Bitte achten Sie auf die richtige Polarität (+ oder -) bei allen Verbindungen.
Schließen Sie keine Lautsprecher direkt an die Fahrzeugkarosserie bzw. Batterie an.

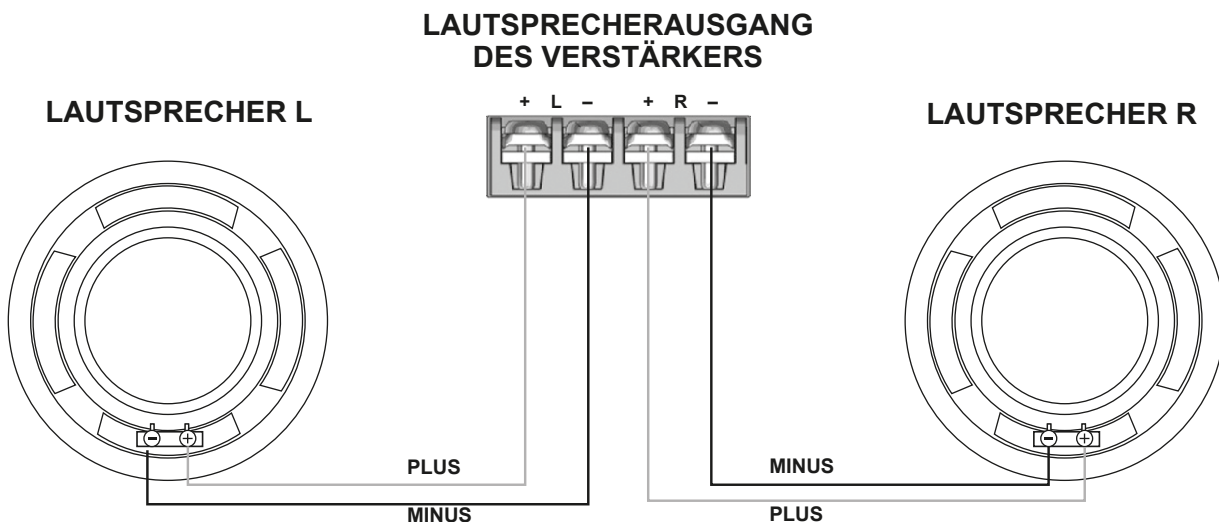



RENEGADE

PURE AUDIO ENGINES



Audio Design GmbH
Am Breilingsweg 3 · D-76709 Kronau/Germany
Tel. +49 7253 - 9465-0 · Fax +49 7253 - 946510
www.audiodesign.de

©2019 Audio Design GmbH, All Rights Reserved

